

iSeed®

Settings for Accord



Guidelines & remarks

- At scale 5, insufficient seed flows. No problems at scale 10 and higher.
- Linear relationship between rpm and quantity delivered up to 100 rpm, above 100 rpm the relationship flattens.



Calibrations for Accord

ADJUSTMENT : FINE SEED

BARE SEED					
KM/HR	5	10	20	30	40
SCALE METERING DEVICE	KG/HA	KG/HA	KG/HA	KG/HA	KG/HA
10	8,1	8,3	6,9	6,7	5,9
20	15,7	15,2	13,7	13,1	13,0
40	22,8	21,7	18,2	18,5	17,4
60	27,7	27,7	20,7	22,7	20,6
80	30,0	28,2	22,6	23,9	21,8
100	34,9	34,2	25,2	28,1	25,0

ADJUSTMENT : FINE SEED

iSEED®					
KM/HR	5	10	20	30	40
SCALE METERING DEVICE	KG/HA	KG/HA	KG/HA	KG/HA	KG/HA
10	10,5	8,9	7,0	5,4	5,3
20	23,5	26,0	20,1	20,2	24,2
40	37,1	29,8	25,5	27,5	35,9
60	48,4	29,2	28,1	32,7	40,0
80	50,7	33,6	30,9	34,9	47,6
100	61,9	33,0	33,5	40,0	51,7

PROPORTION iSEED® / BARE SEED

PROPORTION					
KM/HR	5	10	20	30	40
SCALE METERING DEVICE	KG/HA	KG/HA	KG/HA	KG/HA	KG/HA
10	1,3	1,1	1,0	0,8	0,9
20	1,5	1,7	1,5	1,5	1,9
40	1,6	1,4	1,4	1,5	2,1
60	1,7	1,1	1,4	1,4	1,9
80	1,7	1,2	1,4	1,5	2,2
100	1,8	1,0	1,3	1,4	2,1

DLF-TRIFOLIUM

Ny Oestergade 9 - DK 4000 Roskilde
 Tel. +45 46 33 03 00 - Fax +45 46 32 08 30
www.dlf.com - dlf@dlf.com

The above calibration is an example. Always make your own calibrations before sowing!