

iSeed®

Settings for Einböck Pneumaticstar



Calibrations for Einböck Pneumaticstar

BARE SEED	
MACHINE SHAFT SETTING	KG/HA
5	1,4
10	6,5
20	27,5
30	36,5
40	52,0
50	65,0
60	78,0
70	91,0


iSEED®	
MACHINE SHAFT SETTING	KG/HA
5	1,3
10	6,5
20	27,5
30	36,0
40	52,0
50	65,0
60	78,0
70	91,0

Guidelines & remarks

- Agitator shaft: Activated
- Bottom valve/flap: 0
- Seeding roller E
- Seeding speed 10 km/h
- PTO 750 rpm
(Speed must NOT be lower than 500 rpm)



iSEED® / BARE SEED	
MACHINE SHAFT SETTING	RATIO
5	1,0
10	1,0
20	1,0
30	1,0
40	1,0
50	1,0
60	1,0
70	1,0

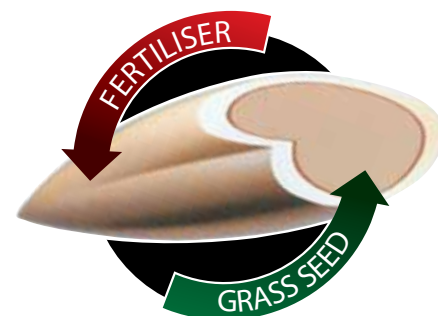

DLF-TRIFOLIUM
Ny Oestergade 9 - DK 4000 Roskilde
Tel. +45 46 33 03 00 - Fax +45 46 32 08 30
www.dlf.com - dlf@dlf.com

The above calibration is an example. Always make your own calibrations before sowing!